



Instruction Manual for UltraSlimline Floor Fan

Model: 10187 (with remote-control)

Voltage: 120V AC

Frequency: 60 HZ

Current: 0.6 A



PLEASE READ AND SAVE THESE INSTRUCTIONS

© 2006 Seville Classics Inc. (800)-323-5565 or (310)-533-3800
www.sevilleclassics.com

Parts List

A FAN-Body



B BASE-Front



C BASE-Back



D Fan-Body SCREWS



E Base SCREWS
and CLIPS

 


F Remote Control
and CLIPS



Fan Assembly


STEP 1

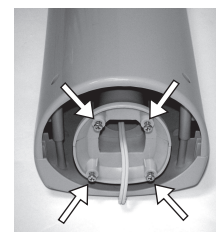


Remove the 4 SCREWS **D** from the center post on the bottom of the FAN - body **A**.

Fan Assembly


STEP 2

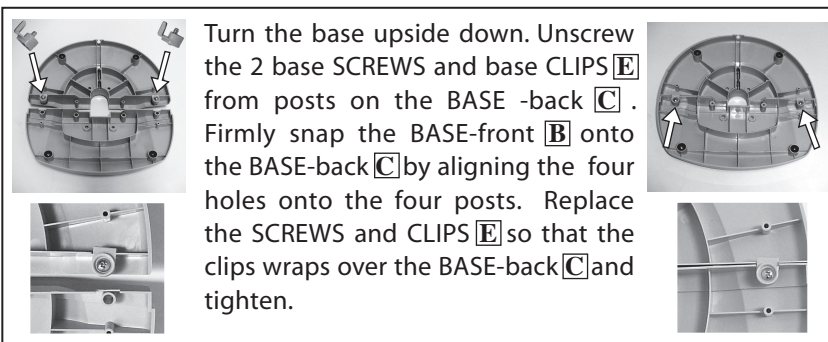

STEP 3

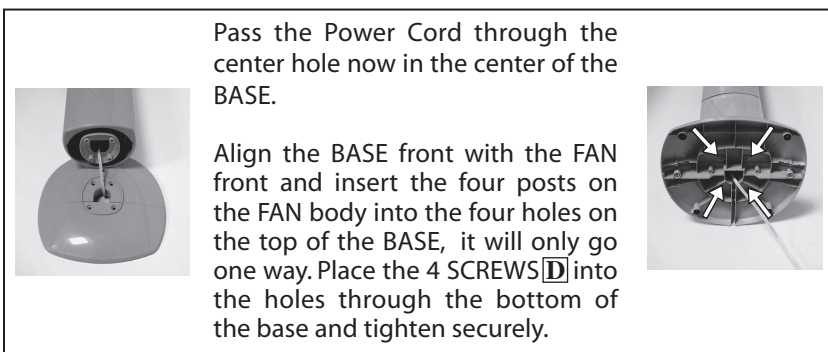

 STEP 4

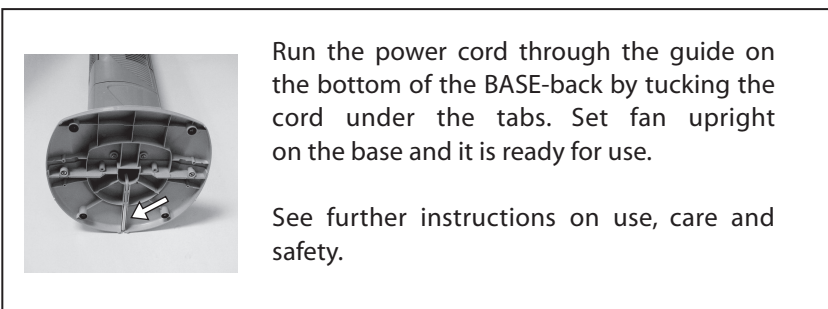

Control Panel



Push buttons to activate features



ON/OFF: Turns fan **ON** & **OFF**



Speed Selection: Allows three different speed settings



Timing Selection: There are 15 settings, in 1/2 hour increments. Time increases with each push of the button. 1/2 hour, 1 hour, 1-1/2, 2 hours etc. to a maximum time setting of 7- 1/2 hours.

The LED Indicators on the control panel are marked 0.5h, 1h, 2h, 4h. (h for Hour) The sum of the lit LED's is the total time period.

Control Panel



Selection of Wind: Allows for three different wind settings:



1. Normal Wind: The Normal wind mode is simply the Low, Medium & High fan speed settings.



2. Sleeping Wind: The Sleeping Wind allows you to set a speed and that speed will gradually slow to Low. The air flows as an evening breeze slowing to a light night breeze.

(1) Low Sleeping Wind - The air flow will remain at Low speed.

 
(2) Medium Sleeping Wind - The air flow begins at Medium speed for half an hour and then drop to Low speed.

(3) High Sleeping Wind - The air flow will remain on High speed for half an hour, then drop to Medium speed for half an hour, and finally drop to Low speed.




3) Natural Wind: The natural wind mode automatically selects wind speed randomly as you would find outdoors. The speeds are graphically described below.

(1) Low Natural Wind – The wind settings will repeat the following 80 second wind cycle with Low speed being the most common.

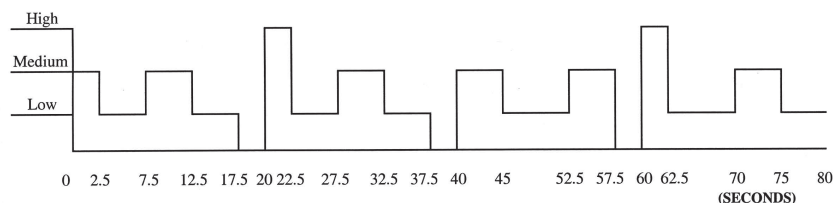


Control Panel

 (2) Medium Natural Wind - The wind settings will repeat the following 80 second wind cycle with Medium speed being the most common.

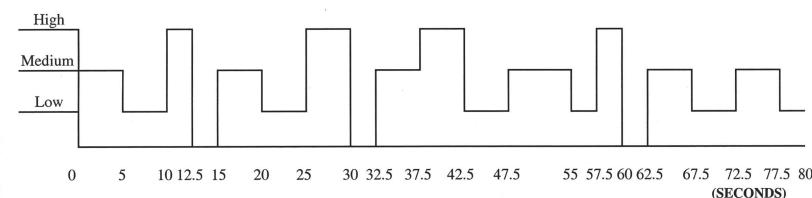

 (3) High Natural Wind - The wind settings will repeat the following 80 second wind cycle with high speed being the most common.

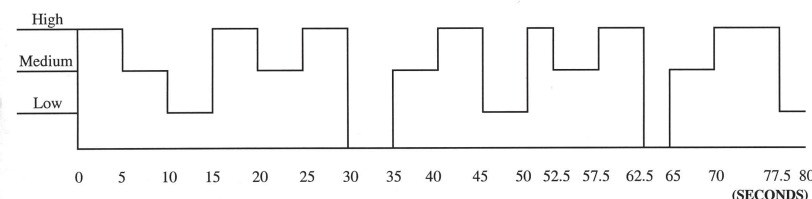


Oscillating Selection: This function starts & stops the oscillation of the fan.


Controlling the Oscillation Angles: To change the wind direction, place both hands on the fan and turn the fan body to the left or right. There are 5 positions to choose from to change the oscillation angle. To have the fan fully oscillate left and right, have the fan in the third or center position.


UltraSlimline Remote Control for Floor Fan

To use your remote, point the top end directly at the front of the fan aiming at the little window just below the control panel on the top of the fan.


Functions:


 **Power Button** - Turns fan **ON** & **OFF**


 **Speed Mode** - Changes wind speed from Low (LO) to Medium (MED) to High (HI).


 **Wind Mode** - Changes the wind mode from Normal wind to Natural wind to Sleeping wind.

(1) **Normal Wind** is indicated by **no** icon appearing in the upper left hand corner of the display.

 (2) **Natural Wind** is indicated by a **blinking** triangle icon appearing in the upper left hand corner of the display.

 (3) **Sleeping Wind** is indicated by a **solid** triangle icon appearing in the upper left hand corner of the remote.

 **Timer** - Changes the time, the fan is on from 0.5 hr up to a max of 7.5 hr, in 0.5 hr increments.

 **Oscillation** - Turns the fan oscillation **ON** or **OFF**

***The remote control operates on 2 AAA batteries (included).**

***DO NOT MIX OLD AND NEW BATTERIES**

***DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.**

Storage & Cleaning Instructions:

- 1) To clean your fan, first turn it OFF & unplug it.
- 2) Use a soft cloth to wipe the housing. DO NOT use water, gasoline, polish, or any chemical solution. Do NOT soak/immerse fan in water/liquid.
- 3) You can use a vacuum cleaner (narrow tube with the brush attachment) to clean all intake and exhaust vents. This will remove dirt and lint that may accumulate over time. DO NOT ATTEMPT TO TAKE APART FAN.
- 4) Store in a dry place away from excessive heat and direct sunlight.



Important Safety Instructions

READ & SAVE THESE INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.

1. Use this fan only as directed in this manual. Non-recommended use may cause fire, shock or injury.
2. This fan is intended for personal use INDOORS. It is NOT designed for commercial, industrial or outdoor use.
3. Do NOT place fan in or near a window, to avoid contact with the outdoor elements and to avoid exposure to direct sunlight. Rain may create an electrical hazard. Do NOT immerse fan, plug or cord in water/liquid. Do NOT spray with water/liquid. DO NOT use Fan outdoors.
4. Operate fan on a dry, level surface.
5. This appliance has a polarized plug (one blade is wider than the other). This plug is designed to reduce the risk of shock by only fitting into a polarized outlet one way. If the plug does not fully fit in an outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
6. A loose plug/outlet connection may cause overheating and distortion of the plug. Contact a qualified electrician to replace a loose or worn outlet.
7. Always turn the fan off and unplug it when transporting it to another location and before cleaning.
8. When disconnecting fan, turn it off, grip the plug firmly and pull it from the wall outlet. Never pull it out by the cord.
9. Do NOT operate the fan if the cord or plug is damaged, the unit is malfunctioning, has been dropped or is damaged in any way.
10. Do NOT operate your fan in the presence of flammable and/or explosive fumes.
11. Do NOT place the fan or any of its parts near an open flame, cooking appliance or heater.
12. Do NOT operate the fan if housing has been removed or damaged.
13. Avoid contact with fan's moving parts.
14. Close supervision is necessary when operating fan near children.
15. Do NOT mount fan on a wall or hang it from the ceiling.
16. Use of attachments of any kind is NOT recommended.
17. WARNING: REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK – DO NOT USE THIS FAN WITH ANY SOLID STATE SPEED CONTROL DEVICES.

Should you have any questions, comments or suggestions please contact us at:
Seville Classics Inc. Tel: (800)-323-5565 or (310)-533-3800 www.sevilleclassics.com